




2. Attach the aluminium bottom with the plug to the lower end of the bottom pipe. Now choose the net height by using one of the three borings on the aluminium bottom, then place the plastic cap over the bottom.

3. Connect each belt with a clip lock with a belt without a clip lock. Please make sure that the loops are at the end of the belts and not at the clip locks. Like this you get four tensioning belts. Put the **small loops** of the tensioning belts underneath the disk of the sand anchors.



4. To set the position of the sand anchors, lay down one net post at the extension of the upper tensioning rope of the net. Now place the second net post at the end of the

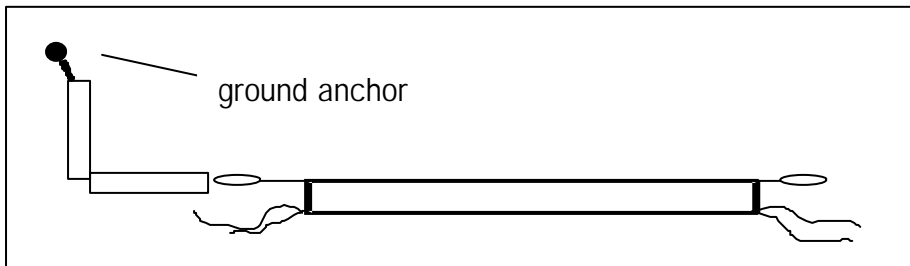

first one in a 90° angle. The end of this net post marks the first position for a sand anchor. Repeat this procedure to find the other positions. Altogether you



get four positions for the sand anchors to fix the net posts. At last hammer the sand anchors into the sand at a pointed angle.

5. Put the big loops of the tensioning belts around the top end of the net post and put up the post sloping. Now place the KEVLAR rope and the red isilink tensioning rope of the net also around the post.



## >>> Installation Instructions Pro Beach-Set

6. Tighten the four tensioning belts evenly and like this put up the net posts vertically.



7. Pull the blue isilink tensioning ropes through the black hooks and hang them into the belt clasplings.

The ideal net position can be reached by adjusting the tensioning belts and the lower

tensioning ropes of the net. The net should be centred between the two net posts. You can adjust the length of the lower isilink rope without knots by the small loops within the line.



1. Both net posts consist of three pipes. The pipe with the FUNTEC writing is the middle piece, the one with the aluminium loop is the top part.

**And now? Have fun playing!**